



INSTRUCTIONS

WIND DEFLECTOR

“Ribbed”

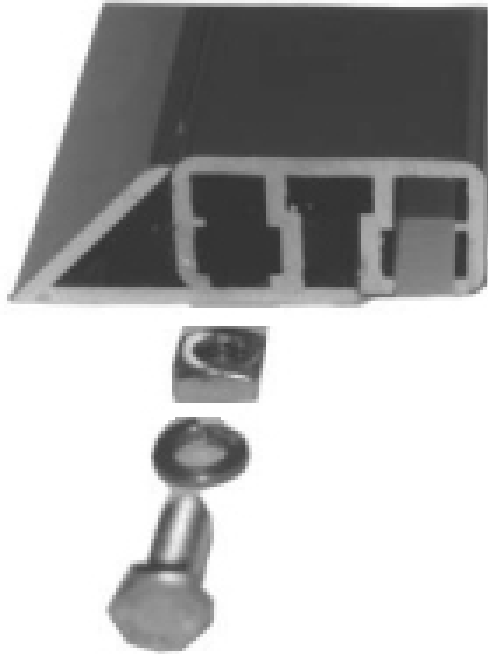

“Smooth”

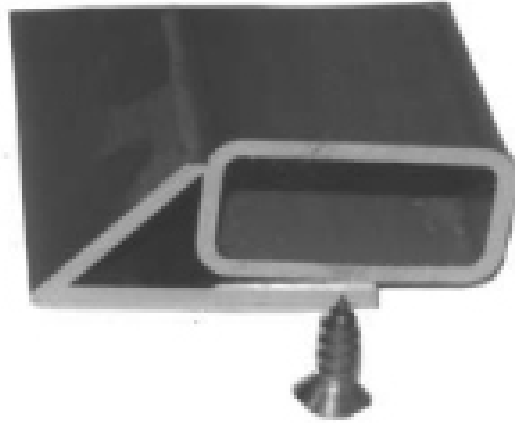

Instructions for racks that have front crossbars made with “Ribbed” aluminum.

1. Remove what ever parts are necessary at each end of the front crossbar that will allow you to slide a 5/16” square nut through the front bottom channel at each end.
2. Center the Wind Deflector. The holes must be on the bottom of crossbar, with angle flush the crossbar. See photo above.
3. Install Wind Deflector by screwing the bolts with lock washer into holes with the square nut above and tighten.

Instructions for racks with Smooth front crossbar.

1. Drill will be required. Center the Wind Deflector and mark the hole locations from the Wind Deflector to the crossbar. Drill a 3/16” hole into the crossbar. Use the 1/4” Self tapping screws and tighten.